


## Digital Room Thermostat Operating & Installation Manual

### 1. DESCRIPTION

The Brivis Digital Room Thermostat is an easy to operate manual thermostat.

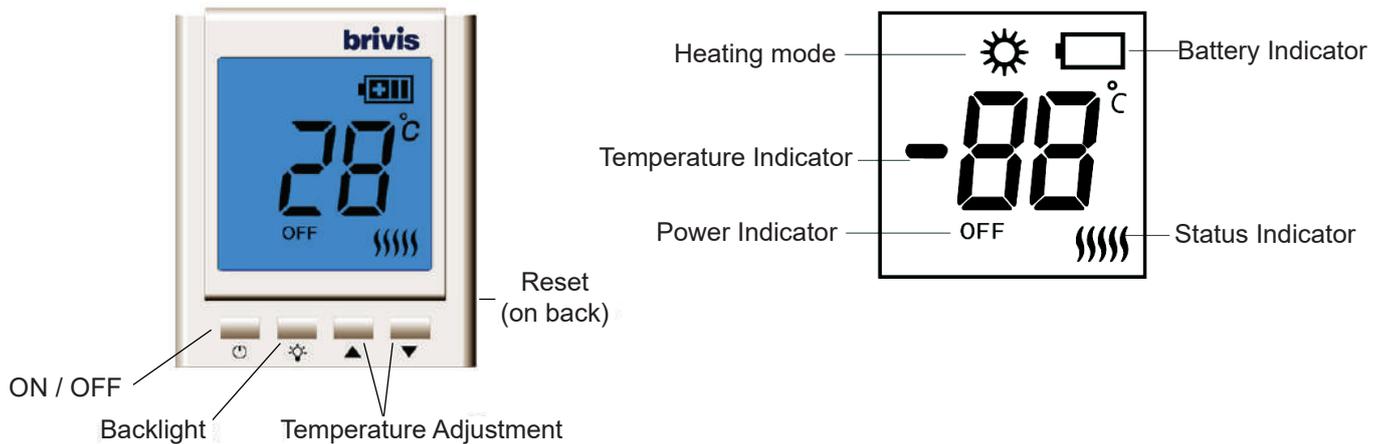

### 2. MAIN FEATURES

|                               |                                 |
|-------------------------------|---------------------------------|
| Power Source:                 | 2 x 1.5V AA Battery             |
| Battery Life:                 | 1 year (typical operation)      |
| Protection Class:             | IP30                            |
| Switch Function / Capacity:   | 36V AC or DC, 1.0 Amp maximum   |
| Temperature Set-point Range:  | 5°C to 35°C                     |
| Temperature Display Range:    | -9°C to 50°C                    |
| Temperature Control Accuracy: | 1°C                             |
| Returned Temperature:         | 1°C                             |
| Storage Temperature Range:    | -20°C to 70°C                   |
| Dimensions:                   | 100mm (L) x 85mm (W) x 25mm (H) |
| Weight:                       | 180 grams (excluding batteries) |

### 3. SPECIFICATIONS (ELECTRICAL DATA)

|    |  |
|----|--|
| 1. | 0 to 36Vac 50/60Hz or DC               |
| 2. | 0.05 to 1.0 Amps (load per terminal)   |
| 3. | 1.0 Amps Maximum Total (all terminals) |

#### 1. Start-up

Fit the battery, press , the LCD flashes with the set temperature, then displays the working mode icon and environment temperature (factory default set temperature is 18°C).

#### 2. Power-off

Pressing  powers the thermostat on / off. Whilst off the current environment temperature remains on display.

#### 3. Backlight

Press ,  or , to enable the backlight. The backlight will go off several seconds after last button press.

#### 4. Setting Temperature

Press ▲ or ▼ to set the temperature.

#### 5. Working status

This symbol  indicates that the thermostat is heating.

#### 6. Restore factory defaults


Press the [RESET] button on the back of the thermostat to restore factory defaults.

#### 7. Low battery indicator



When the low battery  indicator flashes replace the batteries immediately.

### 4. WIRING & INSTALLATION


#### Wiring

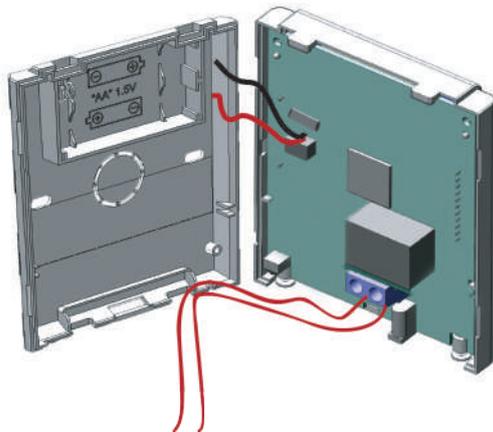

#### Installation

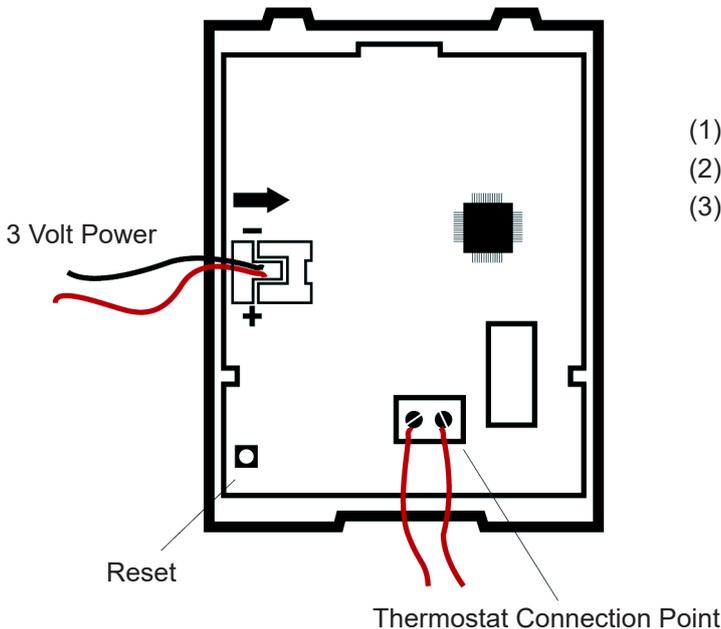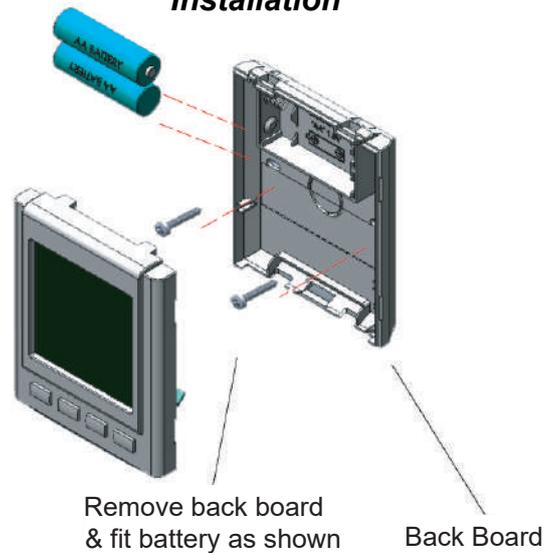

- (1) Fix the back board onto a wall
- (2) Insert batteries into the thermostat
- (3) Attach the thermostat to the backboard

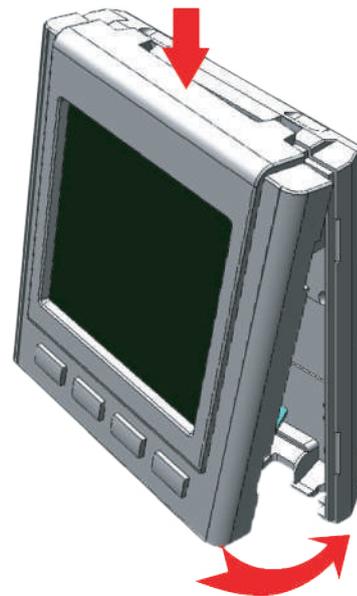

## Rinnai Australia Pty Ltd

ABN 74 005 138 769 | AU24752

100 Atlantic Drive, Keysborough, Victoria 3173

P.O. Box 460, Braeside, Victoria 3195

Tel: (03) 92716625 Fax: (03) 92716622

#### National Help Line

Tel: 1300 555 545\* Fax: 1300 555 655

Monday to Friday, 8.00 am to 5.00 pm EST.

\*Cost of a local call higher from mobile or public phones.

For further information visit [www.rinnai.com.au](http://www.rinnai.com.au)  
or email [enquiry@rinnai.com.au](mailto:enquiry@rinnai.com.au)